


Installation Quick Start

Consult Installation Guide for complete Instructions
Call 417-237-0905 for assistance

Step 1 – Assemble Backframe

- Backframe is designed to be assembled upright on mounting bracket at the final location
- Install mount
- Identify & arrange all backframe pieces in the following order:

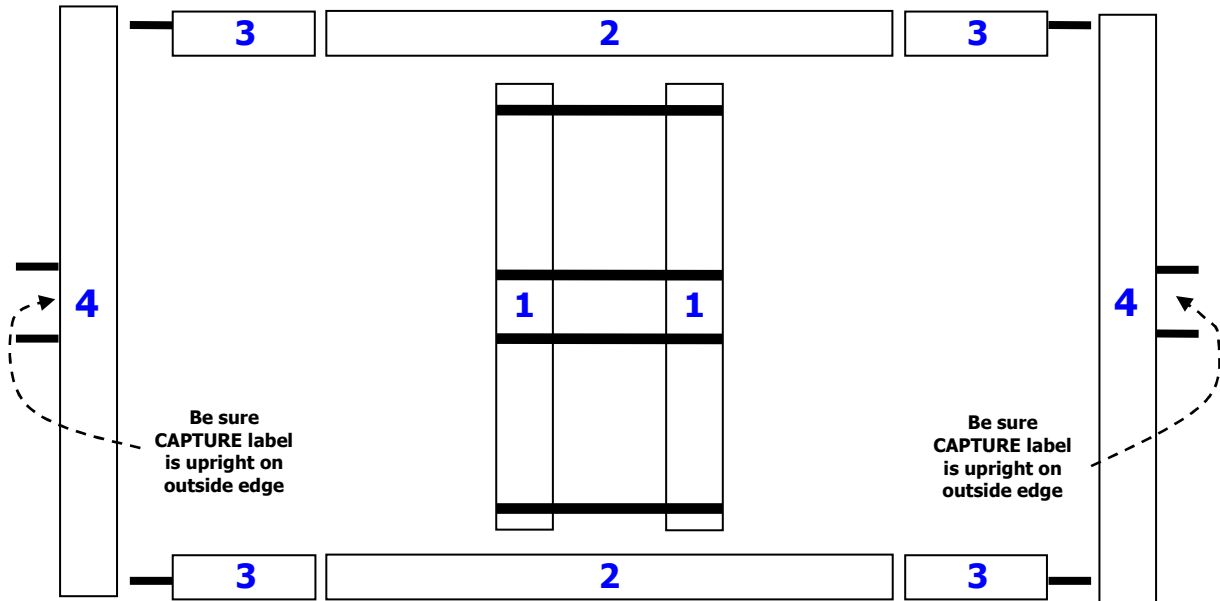


All backframe bolts require 15mm wrench

- Attach Part 1 center frame to mount – using 10mm bolts (not supplied)
- Attach Part 2 cross channels to top & bottom of center frame – slide fully to stops & tighten bolts
- Attach Part 3 corner box to each end of cross channels – latch in place
- Attach Part 4 vertical channels to corner boxes – slide fully to stops & tighten bolts
- Check entire frame for fully engaged slots, secure bolts & CAPTURE labels oriented as shown above

Step 2 – Position Panels for Proper Installation

- This display is made up of four panels that must be installed in a specific order
- Use the hooks on back side of panel for handling rather than edges – see CAUTION label on panel backs
- Note “This Side Up” arrows on back of each panel & orient accordingly
- The panels can be identified as follows when looking at their front surfaces:

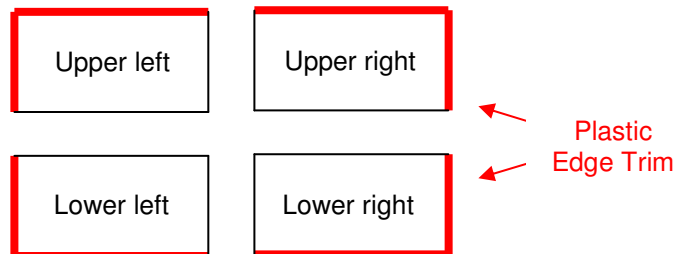

- Note that 3 hooks on back of each panel have spring loaded safety latches – do not hang if absent

Step 3 – Install Lower Panels on Backframe

- Carefully remove protective rubber trim from each panel just before hanging
- Hang the two lower panels on backframe rods – close & lock latches inside channel
- Slide panels together & adjust hooks until center vertical seam is flush & tight from top to bottom
- Do not install upper panels until this center seam alignment has been completed

Step 4 – Install Upper Panels on Backframe

- Carefully remove protective rubber trim from each panel just before hanging
- Hang the two upper panels on backframe rods – ensure that safety latches engage
- The bottom edges of the upper panels should sit **ON TOP** of lower screens – **DO NOT OVERLAP EDGES**

Adjust vertical bolts in hooks to distribute weight evenly among all hooks


DO NOT ALLOW PANEL EDGES TO BEAR THE FULL WEIGHT OF THE PANEL

Step 5 – Alignment of Panel Seams

- Backframe hook position can be adjusted up & down with the vertical set bolt
- The backframe hook can be adjusted in/out by loosening horizontal bolt to free-up the slide action
- Adjust hooks until horizontal & vertical panel seams are flush & tight from end to end
- If seam edges cannot be aligned along the entire length, align all corners & adjust centers in Step 6 below.

Step 6 – Installation of Back Straps

- C-channel back straps are provided to safely secure panels together & allow further fine seam alignment
- Each strap is attached to panel back through the top slot & bottom hole on each – use 13 mm wrench
- Each strap also has two center set bolts which should not touch the panel until the final alignment process
- Install C-channel back straps with flat side out to the rear of panels as shown below:

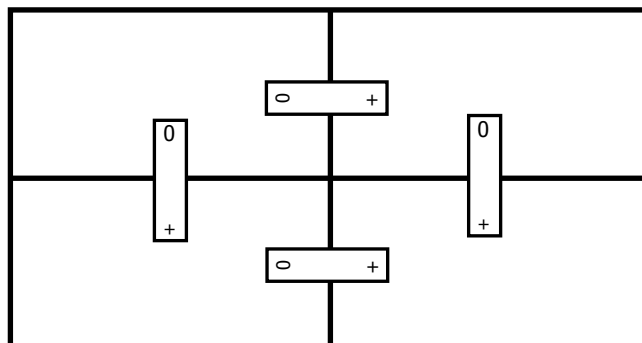

- After back straps are installed, inspect alignment of front seams opposite each strap
 - If seams are not flush, slightly tighten the center set bolt on panel needing a forward adjustment
 - Only slightly tighten one center set bolt – the other bolt should not engage the panel

Do not engage both set bolts at the same time or over-tighten either – the screen image could be affected

Step 7 – Inspect all bolts for tightness & check safety latches on all hooks